



Pinal County Elections


Touch Screen

Using the Voter Access Card Encoder

Turn on the Voter Card Encoder



What you will see on the Encoder Screen when you turn it on.

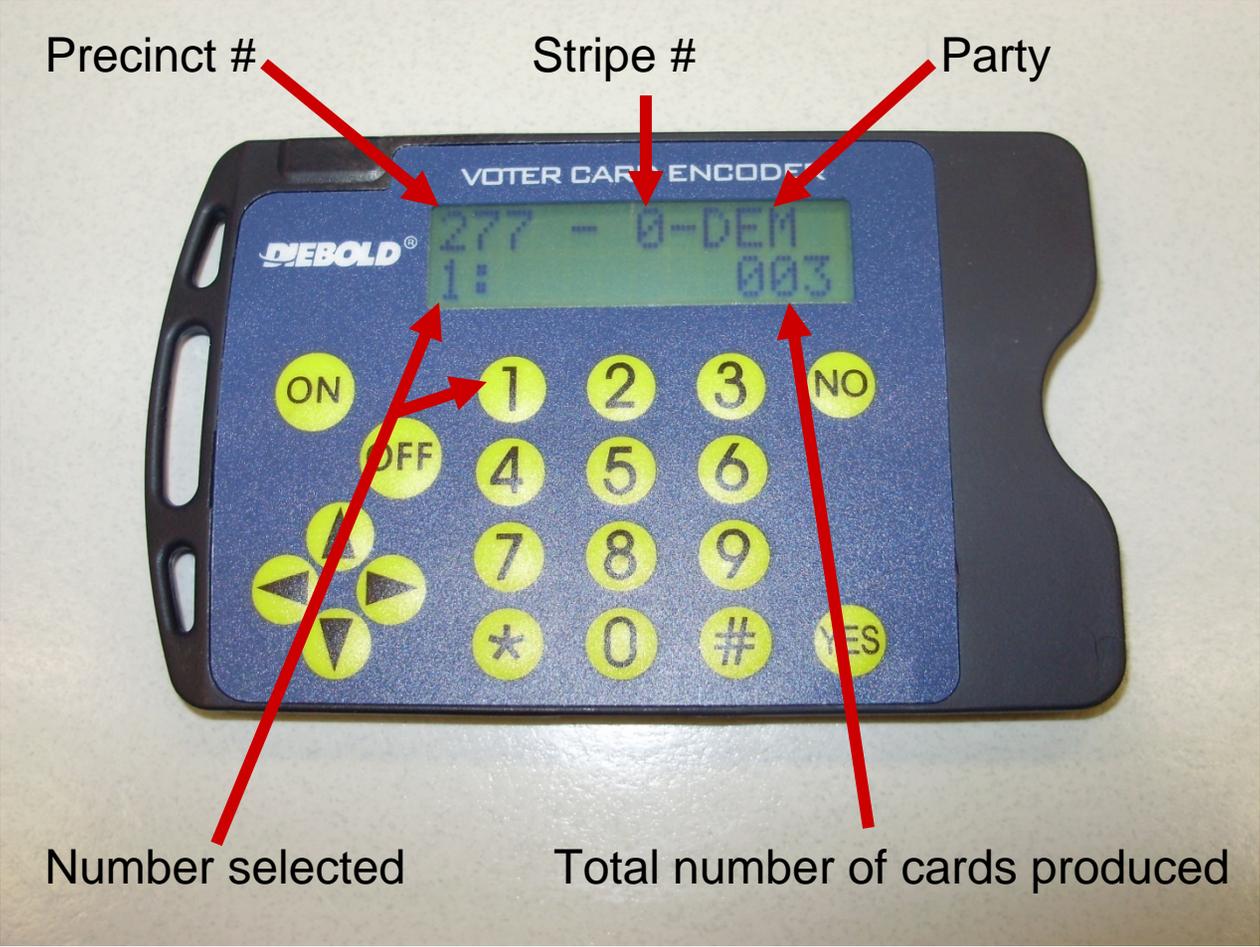

Insert the Voter Access Card into the back of the Encoder.



Front View




Back View



Insert card fully




Select the Encoder Code that matches the correct ballot style, precinct part or party (when applicable). Use the Voter Card Codes cheat sheet to determine what ballot to program for the voter.

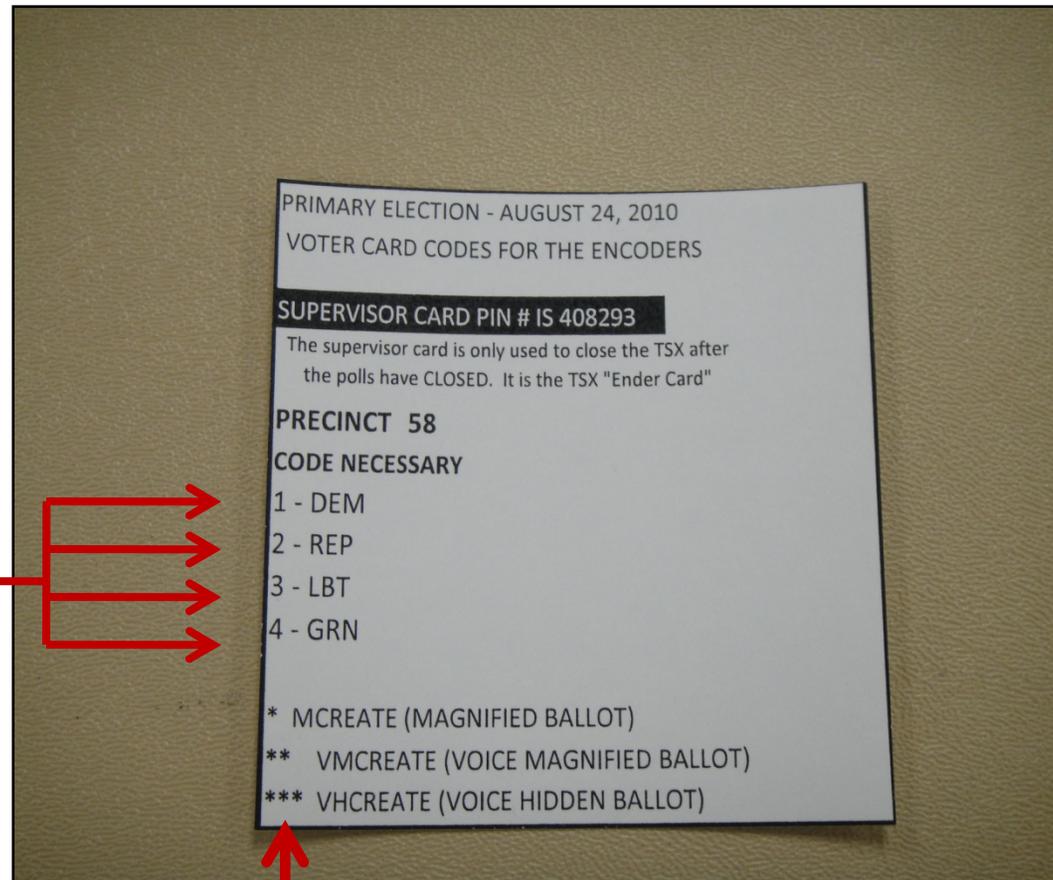


Codes
Necessary for
programming
correct ballot.

special type of Touch Screen display


Examples

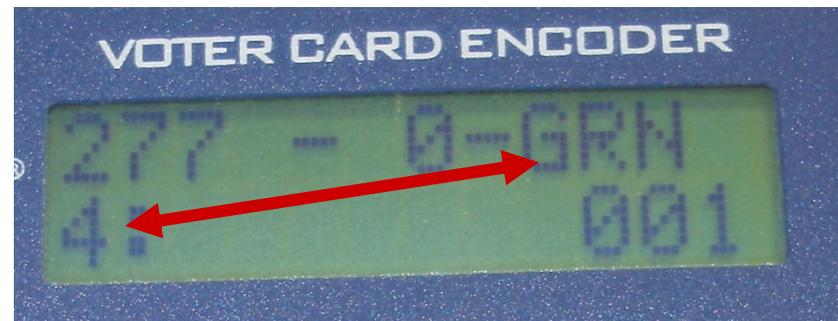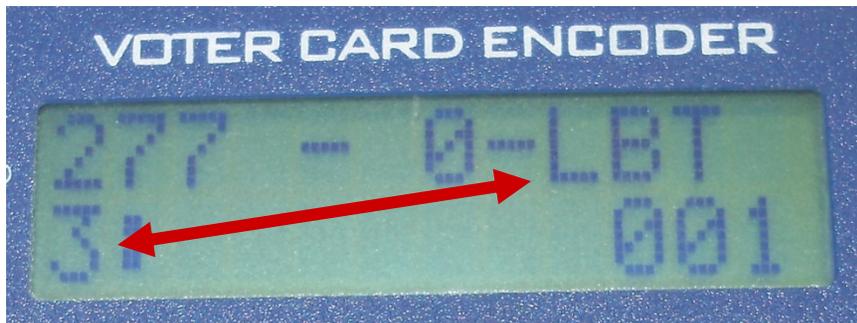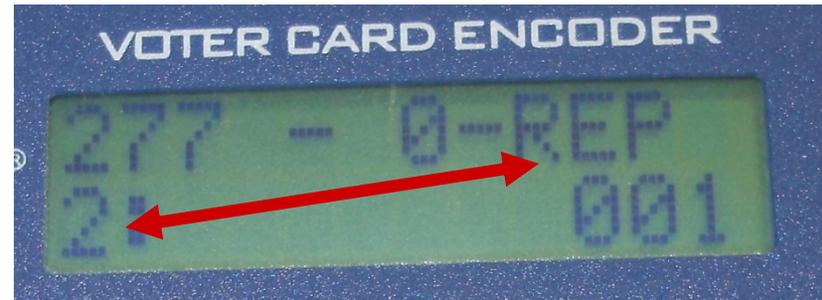

Press the “YES” button to create the Voter Access Card

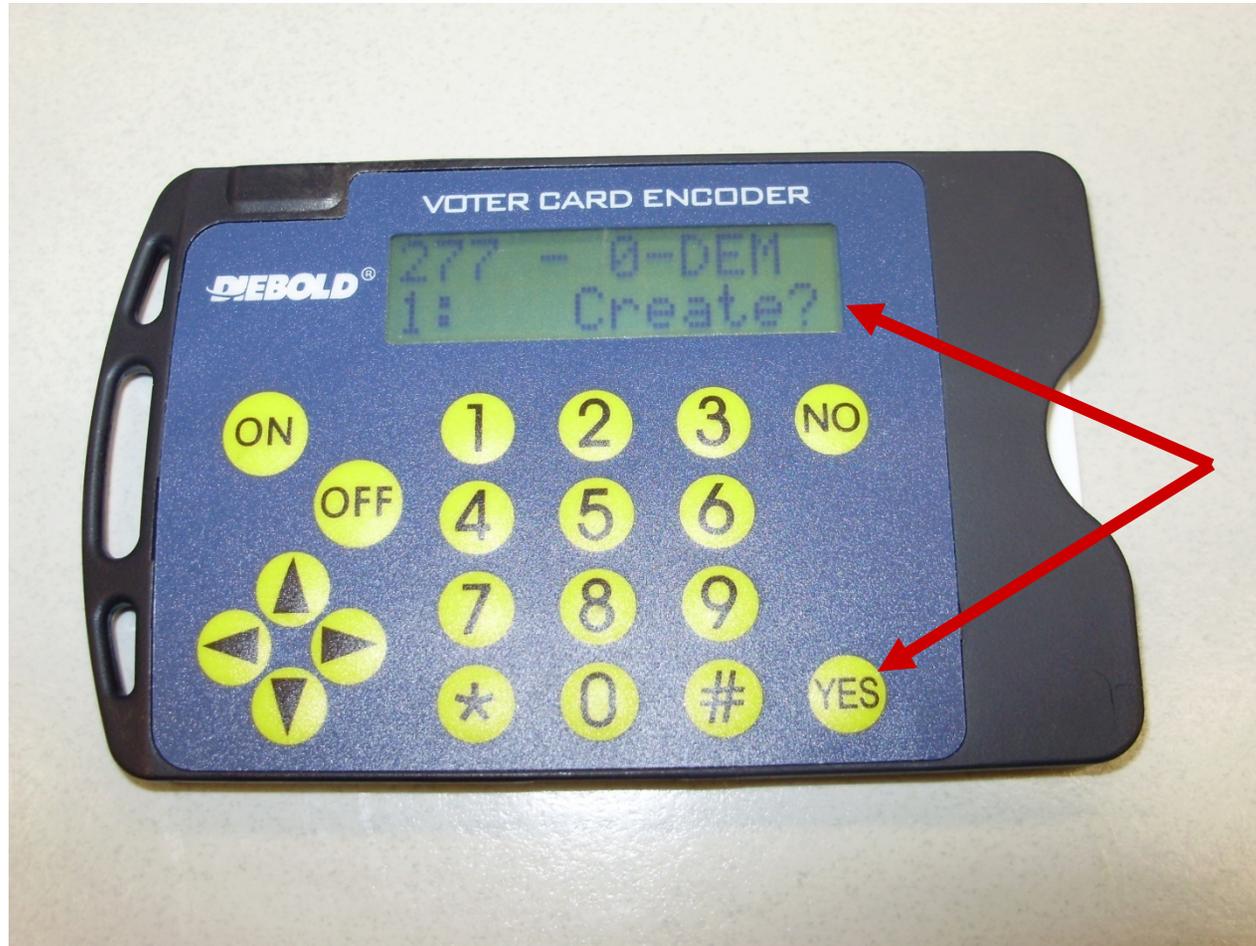


When the LCD screen asks, “Clear?” remove the card and hand it to the voter (You do NOT need to hit any button).

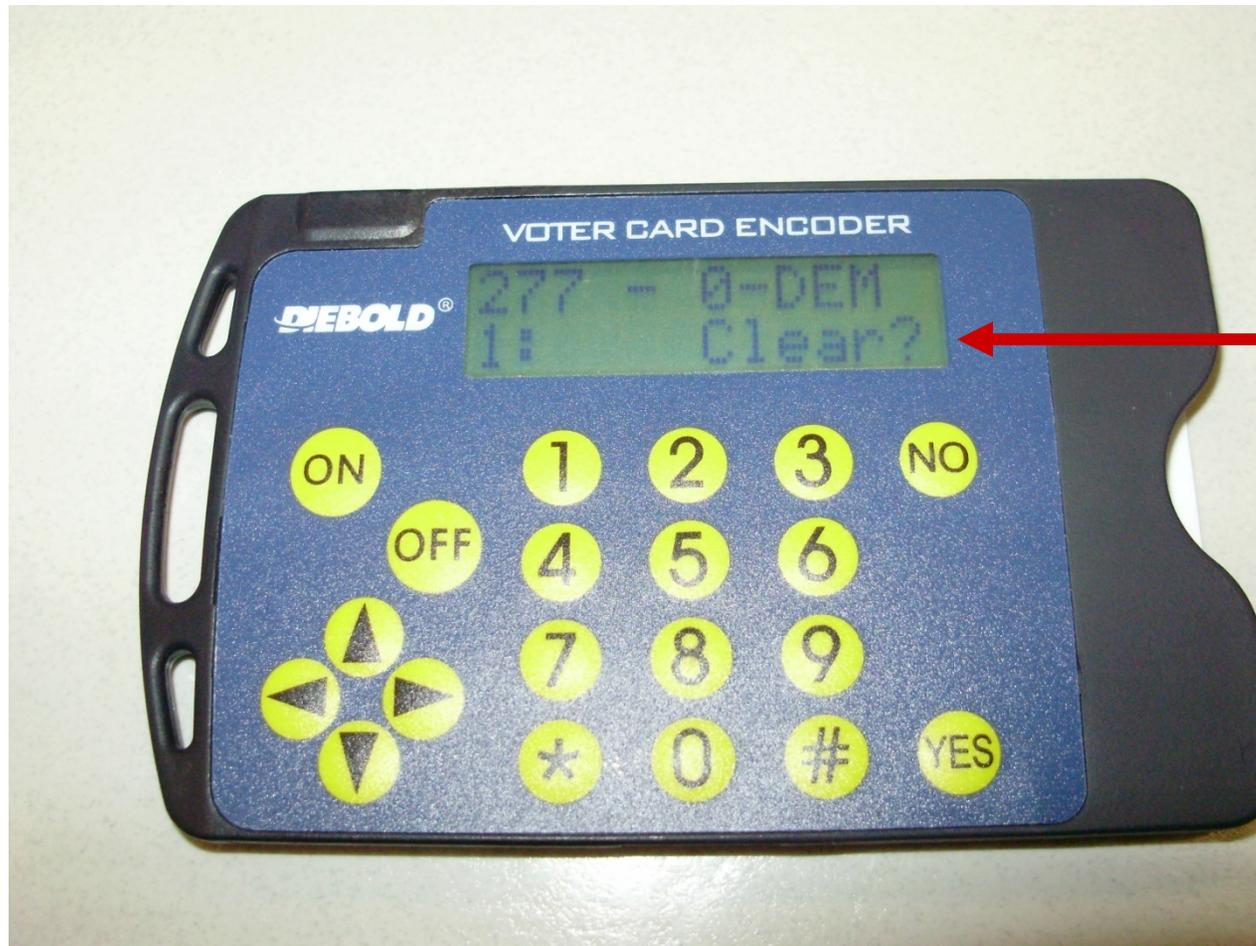

(If you make a mistake, hit YES to clear the card and then re-input the correct choices for the ballot and hit the YES button again to CREATE the proper card for the voter)


Special Display Types

- If a voter requests a special type of Touch Screen display, use the following selections before pressing the YES button to create their card.
- To make the Touch Screen **magnified**, press the “star” ★ key once (or until you see “MCreate?”) then press YES.

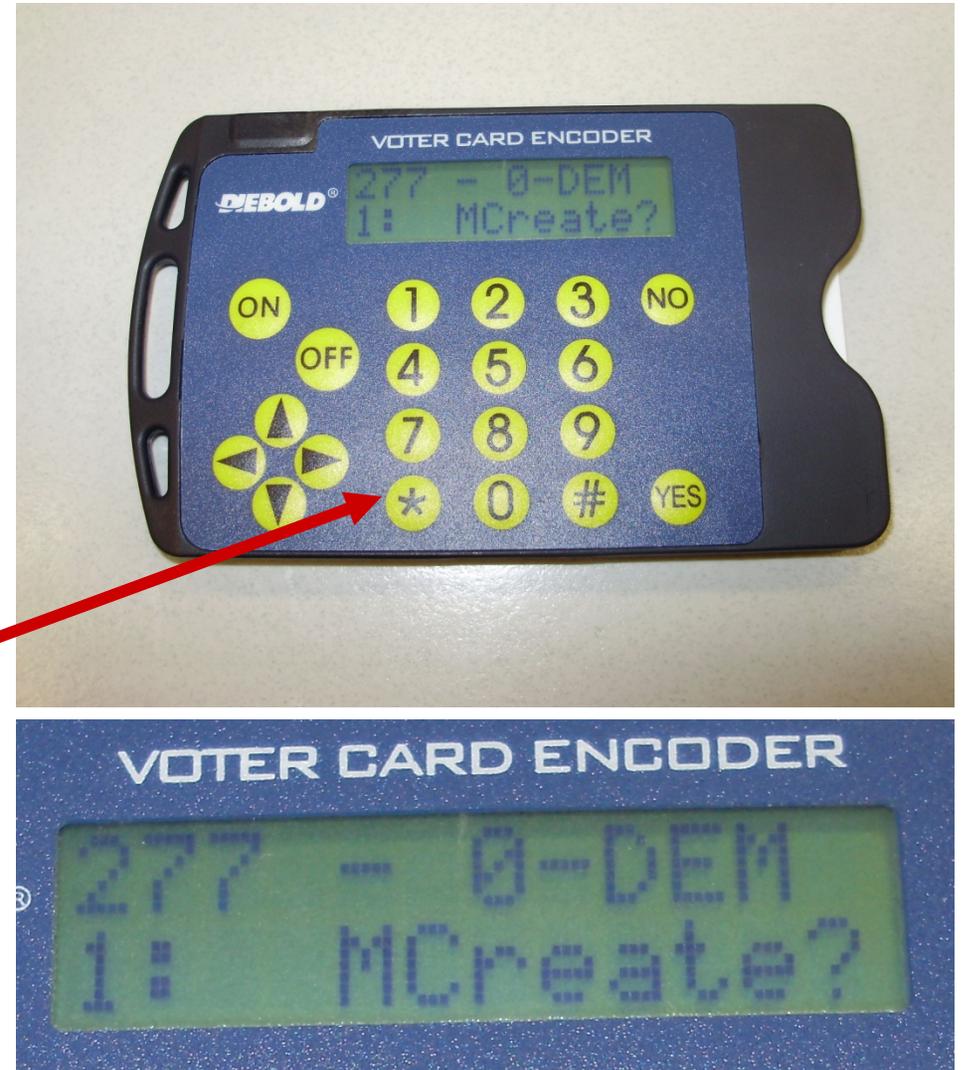



Special Display Types

- To magnify the Touch Screen display and allow the voter to have the ballot read to them through the headphones, press the “star” ★ key twice (or until you see “VMCreate?”) then press YES. ***This option should be programmed into all voter access cards unless a voter is blind.***
- **VM** = Voice/Magnified

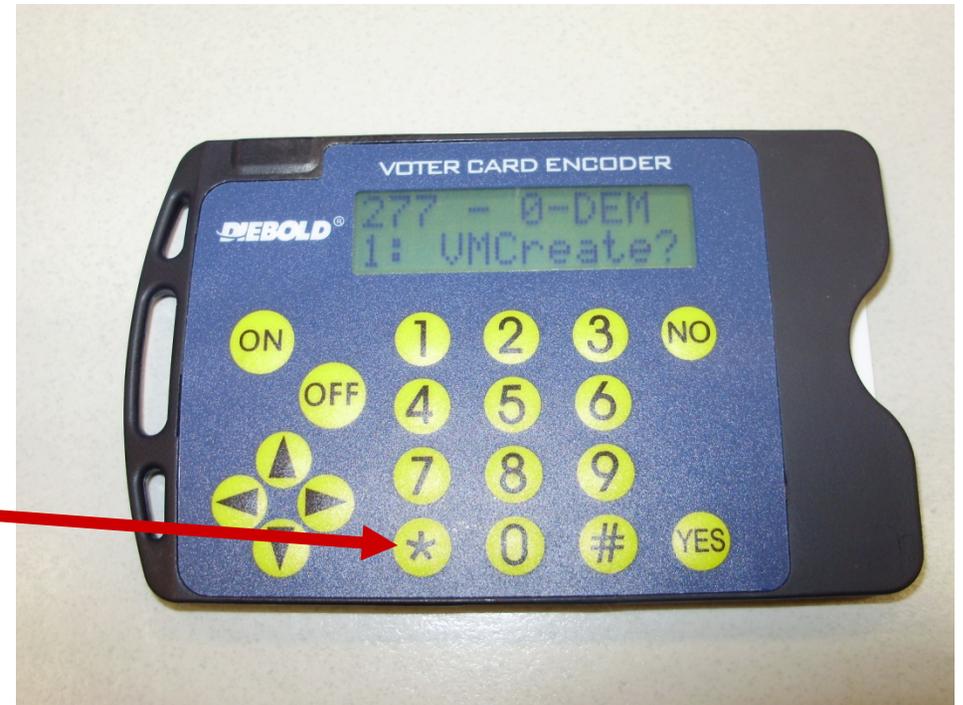


Special Display Types


- The last choice will “hide” the ballot on the Touch Screen display and add only the audio ballot.
- With this selection, you can only vote using the keypad and headphones.
- Press the “star” ★ key three times (or until you see “VHCreate?”) then press YES. ***This option should be programmed for any voters who are blind in order to protect their ballot secrecy.***
- VH = Voice/Hide

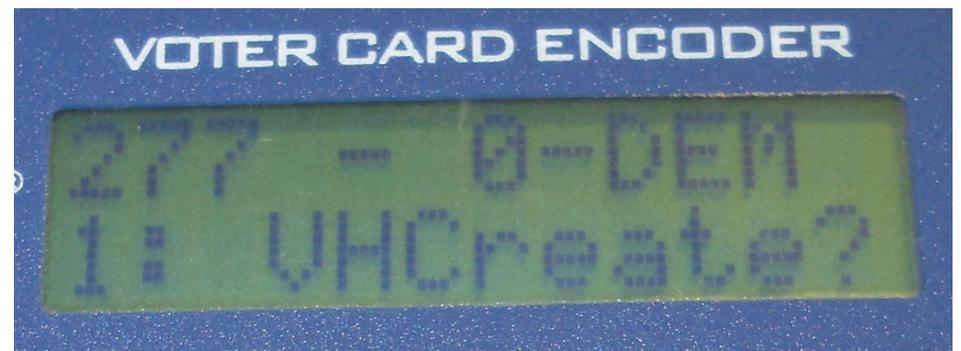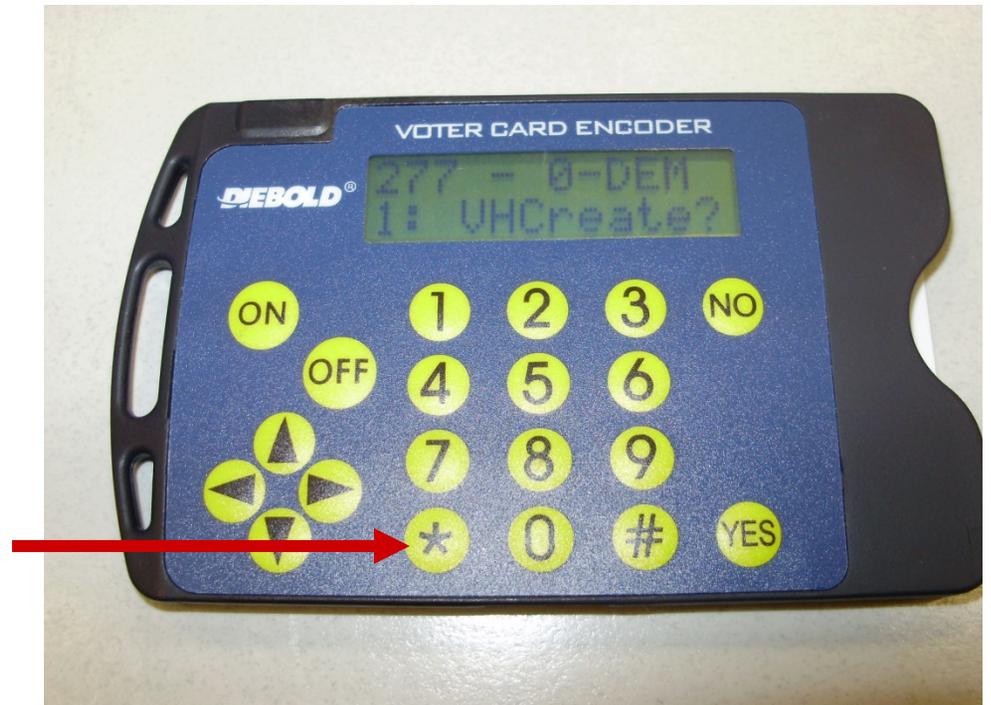

After you create a Voter Access Card...

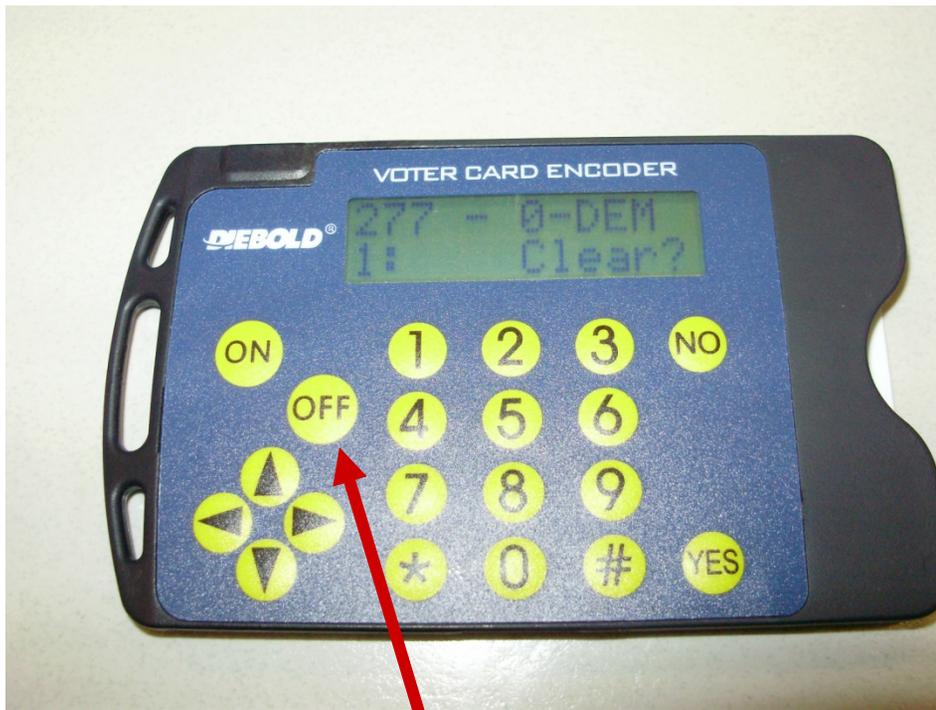


Please turn off the Encoder to save the batteries!

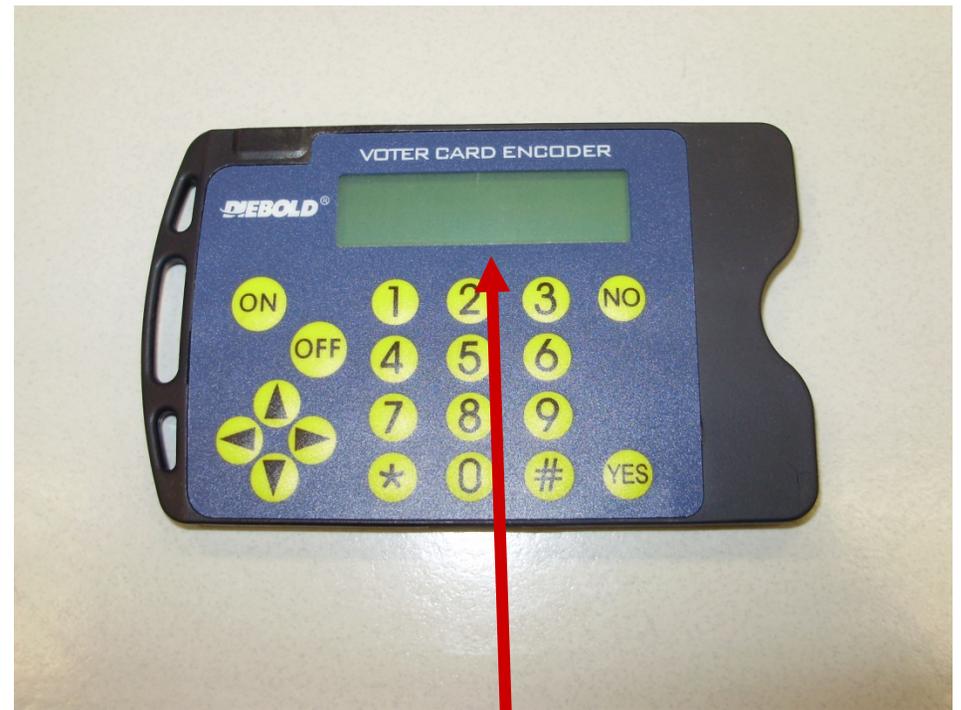

LCD screen will go blank

Touch Screen and Voter Access Card

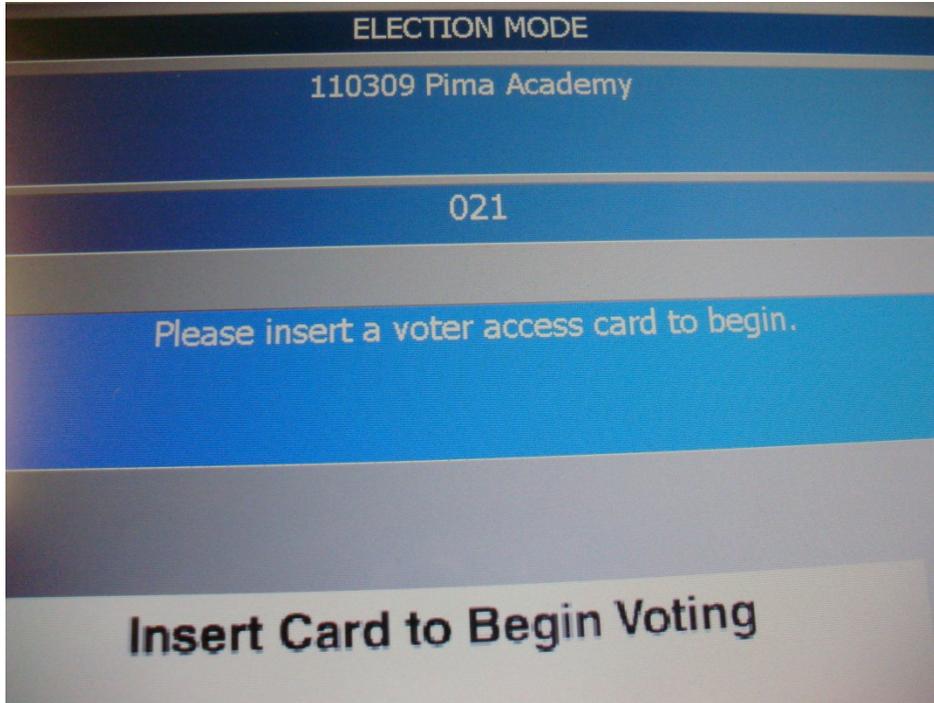

Touch Screen Display



Voter inserts card and follows the on-screen or audio directions.

The card will automatically release when the ballot has been cast. Make sure you get the card back!